


GAS LIFT INSTRUCTIONS

1

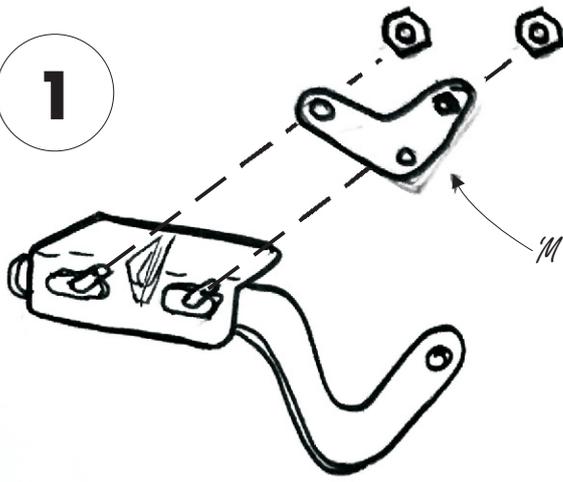


REMOVE NUTS, SLIDE 'M' BRACKET OVER STUDS, DO NUTS BACK UP

'M' LOGO SHOULD FACE OUTWARDS

ATTACH L SHAPE BRACKETS USING NUT BOLT AND WASHER SUPPLIED. BRACKETS MARKED 'L' & 'R' - THIS IS FROM DRIVERS POSITION IN THE CAR


2

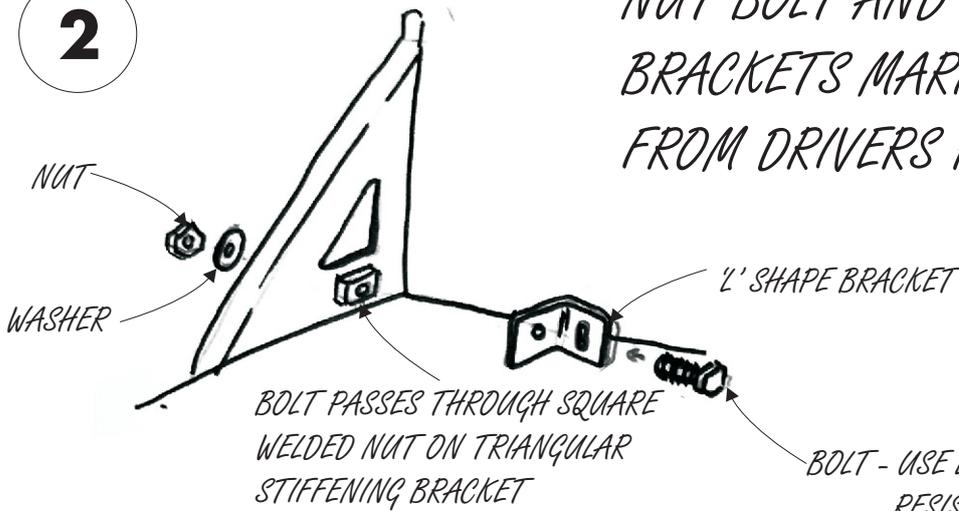

BOLT PASSES THROUGH SQUARE WELDED NUT ON TRIANGULAR STIFFENING BRACKET

BOLT - USE LONGER BOLT IF BALLAST RESISTOR IS FITTED

3

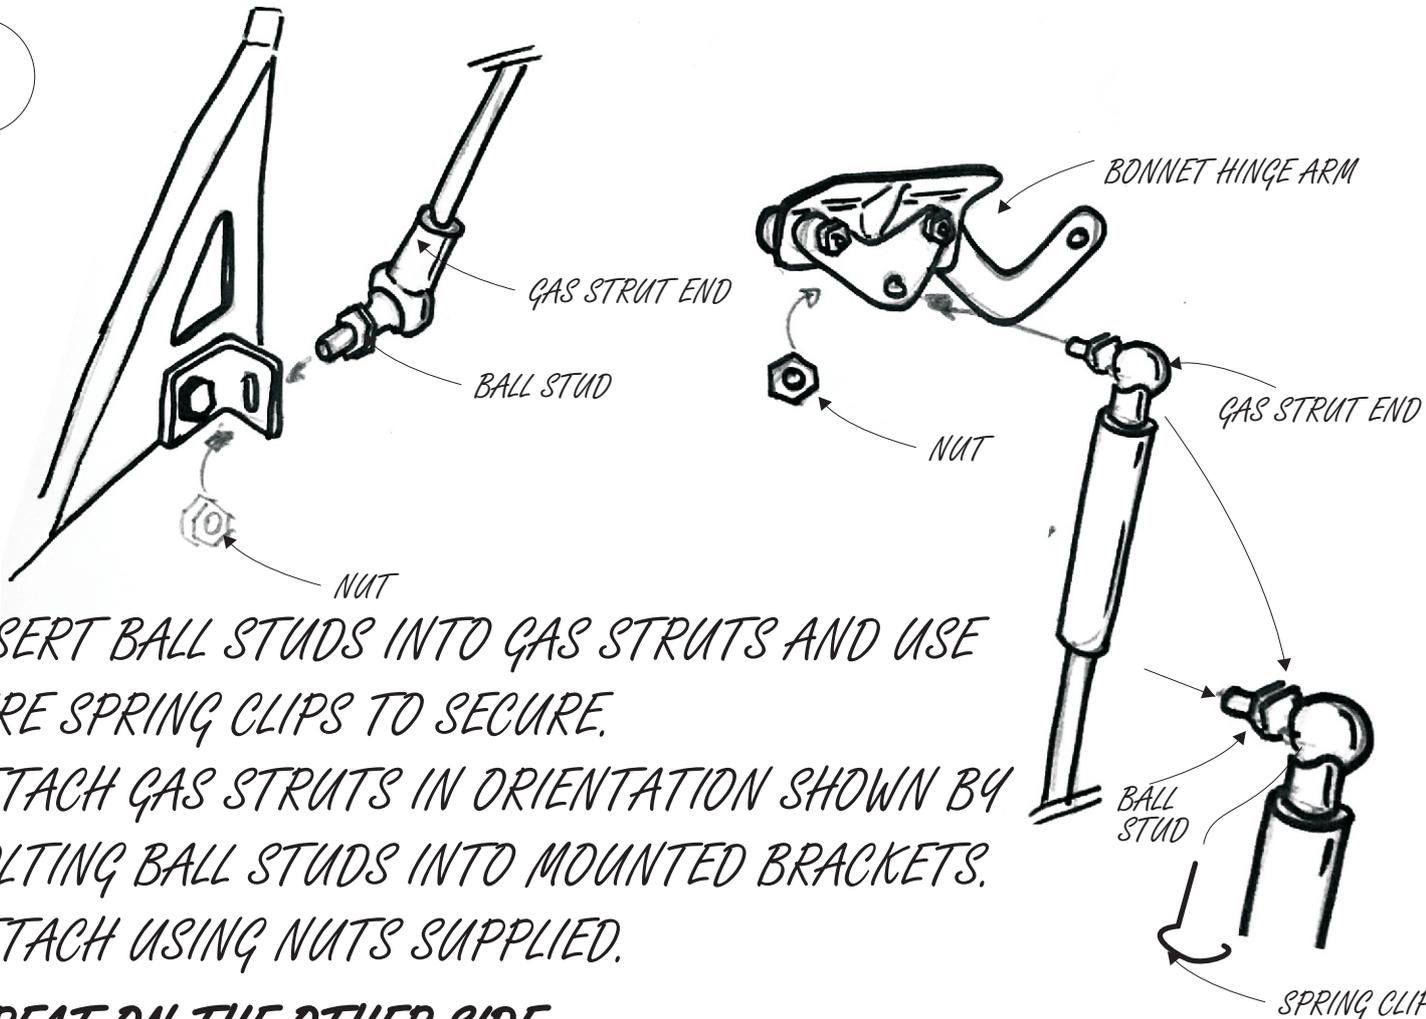

INSERT BALL STUDS INTO GAS STRUTS AND USE WIRE SPRING CLIPS TO SECURE. ATTACH GAS STRUTS IN ORIENTATION SHOWN BY BOLTING BALL STUDS INTO MOUNTED BRACKETS. ATTACH USING NUTS SUPPLIED.

REPEAT ON THE OTHER SIDE